

7200476	SPARE 7.5A	INSTR UNSW 7.5A	BATT TEND 10A	IGN/LGTS 7.5A	MAIN FUSE 20A
	SPARE 10A	VOLTAGE REG. 30A	FUEL PUMP 10A	EFI 10A	CHS/STRT 7.5A
	SPARE 20A	START RELAY	FUEL PUMP RELAY	EFI RELAY	CHASSIS RELAY
	SPARE 30A				